


Documentation for "ACUT" for the Technovision AC1 controller.

Program Operation

Upon powering up the AC1, the unit will fade the audio up to the **MAXIMUM VOLUME** setting in the controller and then wait for a button press. When receiving a button press, the AC1 will fade the audio down to the **MINIMUM VOLUME** setting within the controller. The delay that the system will wait before fading back up is determined by which button is pressed:

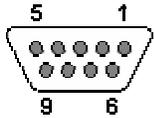

AC1 Keypad connector

BUTTON #	Pins on keypad port to contact	DELAY TIME (minutes)
1	2 and 6	15
2	3 and 6	30
3	4 and 6	45
4	5 and 6	60


AC1 Connectors:

AC1 BACK



Line out RS232 Keypad Power


AC1 FRONT

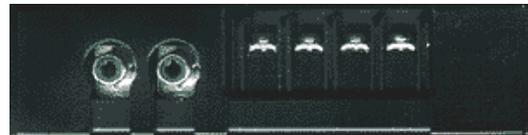

Line IN Speakers

Setting the volume settings in the AC1

You will first have to remove the lid on the AC1 to access the four (4) volume control buttons. To set the **MINIMUM** and **MAXIMUM** volume settings, you have to first hold down either the **VOLUME UP** or **VOLUME DOWN** button while plugging in the AC1. While you have volume running through the AC1, adjust the volume to the desired lowest level and press the **MINIMUM SET** button. Then adjust the volume to the maximum volume required and press the **MAXIMUM SET** button. Once completed, attach the lid and power the AC1 down and up to start the program.

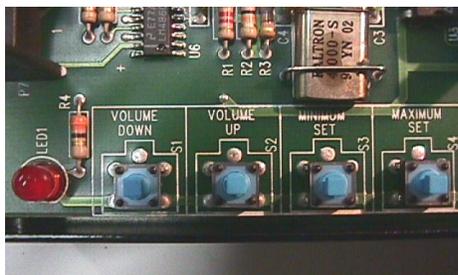

For more information contact:
Technovision Interactive.
(905) 420-5153