

Technovision Inc.

TV-66K with
MSYNCH75 firmware
for the DV75

Quick Reference Guide
Version 1.1

Revision 10/09

Technovision Inc.
1845 Sandstone Manor, #2
Pickering, Ontario
L1W 3X9
P:(905) 420-5153
F:(905) 420-0753
www.technovision.com

Operation

The TV-66K with **MSYNCH75** firmware will send the TRACK 1 command (after the start-up delay) to all the DV75 players upon sensing the start button (terminal 9 grounded). With the button lockout set to OFF (see below), grounding terminal 8 during the show (001) will reset the video to the MENU file (000).

- Make sure the DV75 is set to **MENU** mode.
- If not using a TV66KC, make sure the TV-66K is not installed against a conductive surface.
- Make sure the power to the all the players is OFF before attaching them to the TV-66K.

DIP switches (DEFAULT = ON)

- DIP 1 **ON** = 6 second start-up delay for DV75.
OFF = TEST mode.
- DIP 2 **ON** = Buttons LOCKED ON, start button only available during MENU file (000).
OFF = Buttons (START and RESET) can be pressed during the show (001).

Attaching players

Attach the standard control cable (DV66KC) that comes with the TV66K to DV75 #1 and connector TS1 on the TV-66K controller. This is the player that provides the power to the TV66K.

You may purchase CC66 control cables to attach more players to the TV66K. On these cables, attach either the BLACK or YELLOW wire to terminal #10 (GROUND) and the RED or GREEN wire to any of the other terminals (1..8).

System Diagram

