

Technovision Inc.

TV-66K with
MSYNCH firmware
for the DV66

Quick Reference Guide

Version 1.2

Requires version 2.0+ DV66

Button lockout added in version 1.2

Revision 07/08

Technovision Inc.
1845 Sandstone Manor, #2
Pickering, Ontario
L1W 3X9
P:(905) 420-5153
F:(905) 420-0753
www.technovision.com

Operation

The TV-66K with **MSYNCH** firmware will send the TRACK 1 command (after the start-up delay) to all the DV66 players upon sensing the start button (terminal 9 grounded) during the playing of the MENU file (000).

- Make sure the TV-66K is not installed against a conductive surface.
- Make sure the power to the all the players is OFF before attaching them to the TV-66K.
- Make sure the DV66 is set to **MENU** mode.

DIP switches (DEFAULT = ON)

- DIP 1 **ON** = 6 second start-up delay for DV66.
OFF = TEST mode.
- DIP 2 **ON** = Button LOCKOUT ON, button only available during MENU file (000).
OFF = Button can be pressed anytime.

Attaching players

Attach the standard control cable (DV66KC) that comes with the TV66K to DV66 #1 and connector TS1 on the TV-66K controller. This is the player that provides the power to the TV66K.

You may purchase CC66 control cables to attach more players to the TV66K. On these cables, attach either the BLACK or YELLOW wire to terminal#10 (GROUND) and the RED or GREEN wire to any of the other terminals (1..8).

System Diagram

