

Documentation for AC1 program

PLUSU2


Hardware Requirements

- AC1MOD controller with PLUSU2 firmware and power adapter.
- AC1U2_2 control cable (2 x 2-position terminal blocks) to projectors.
- PC2B4 harness (with DB9M connector) and 4 push buttons


Instructions on installing the controller

1. **Make sure power to the player and controller is disconnected before installation.**
2. On the controller you must insert the AC1U2_2 cable into the RS232 port (DB9 MALE) of the AC1
3. Plug in the power supply to the controller.
4. Grounding one of the Return Pins (2..5) on the KEYPAD port will send the appropriate power command (@19,200 BAUD) to the Plus U2 projectors attached to the COM0 or COM1 ports.

AC1 Controller (back)

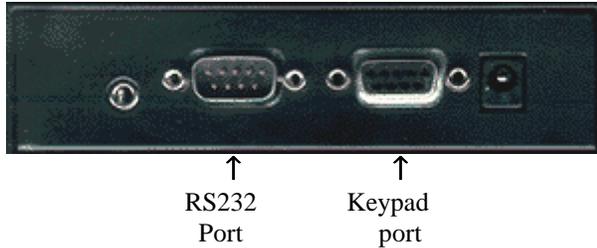

RS232 connector

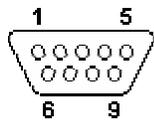


PIN #	RS232 signal
2	RS232 OUTPUT (COM0) from AC1
8	RS232 OUTPUT (COM1) from AC1
5	RS232 GROUND

Two position terminal blocks (labelled COM0 and COM1):

WHITE wire is the transmit signal from the AC1
BLACK is the GROUND

AC1 Keypad connector

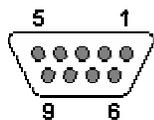

Function	Button#	Pins on keypad port
Power ON (COM0)	1	1 and 2
Power OFF (COM0)	2	1 and 3
Power ON (COM1)	3	1 and 4
Power OFF (COM1)	4	1 and 5

For more information contact: Technovision at (905) 420-5153
www.technovision.com