

Technovision Inc.

TV-66K with
SYNCH firmware
for the DV68

Quick Reference Guide

Version 1.3

Requires version 1.0J firmware in the DV68

Revision 11/06

Technovision Inc.
1845 Sandstone Manor, #2
Pickering, Ontario
L1W 3X9
P:(905) 420-5153
F:(905) 420-0753
www.technovision.com

Operation

The TV-66K with **SYNCH** firmware will send the TRACK 1 RESET command (after the start-up delay) to all the DV68 players and upon sensing track 2 on player#1, resends the TRACK 1 RESET command to all the players.

- DV68 must be in **REPEAT** mode by putting DIP Switch 1 in the ON (UP) position.
- TRACK 1 = SHOW and TRACK 2 = "dummy" track.
- Make sure the TV-66K is not installed against a conductive surface.
- Make sure the power to the all the players is OFF before attaching them to the TV-66K.

Setting the start-up delay

Dipswitch 1 on the TV66K adds a 6 second start-up delay. The TV66K should be set with Dipswitch 1 in the ON position if powering up the DV68. If you are testing the TV66K by unplugging and plugging back in the TV66K, then this Dip switch can be set to the OFF position.

Attaching players

Attach the standard control cable (DV66KC) that comes with the TV66K to DV68 #1 and connector TS1 on the TV-66K controller. This is the player that provides the power to the TV66K.

You may purchase CC68 control cables to attach more players to the TV66K. On these cables, attach either the BLACK or YELLOW wire to terminal#10 (GROUND) and the RED or GREEN wire to any of the other terminals (1..9).

System Diagram

