

Documentation for KPC1 program **TITLE12 version 1.2**

Hardware Requirements


- KPC1 Controller with up to 12 external buttons and power adapter.
- Pioneer DVD-V7400 DVD player set at 4800 baud and POWER ON START (see next page).
- KPC1LD control cable.

Instructions on installing a controller and DVD Player

1. **Make sure power to the DVD player and controller is disconnected before installation.**
2. Insert the button cable harness onto the 7-conductor header on the KPC1 (cables are facing away from the controller).
3. Attach the KPC1LD control cable to the KPC1 and the DVD player.
4. Plug in the DVD player and insert the disc into the tray.
5. Plug in the power supply to the controller - the controller will now start-up and still the player.
6. If the player does not start-up then confirm that BAUD speed is set for 4800.
7. It is recommended that the KPC1 and player be attached to the same power bar so that the controller and player can be easily powered up.

Program Overview

- When restarting the system the controller must be unplugged for at least 5 seconds.

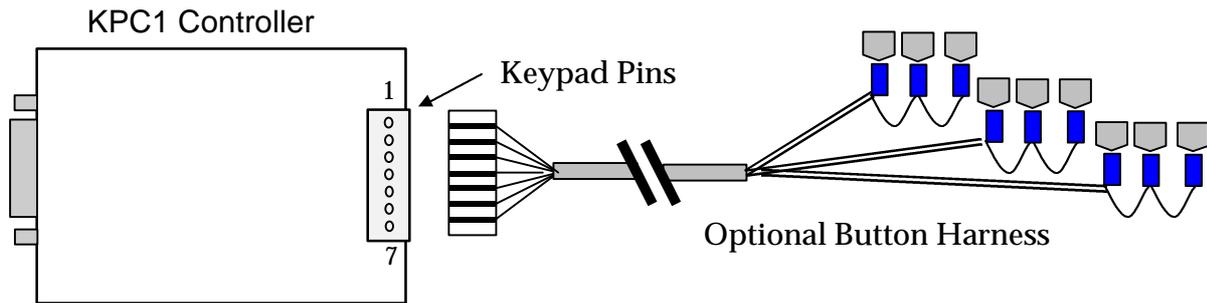

Button Harness

TITLE	Optional harness colours	Pins on Button Connector	Description	Cable
TITLE 1	Green and Brown	7 and 3	R0 and S0	K P C 1 2 3 4
TITLE 2	Green and Red	7 and 2	R0 and S1	
TITLE 3	Green and Orange	7 and 1	R0 and S2	
TITLE 4	Blue and Brown	6 and 3	R1 and S0	
TITLE 5	Blue and Red	6 and 2	R1 and S1	
TITLE 6	Blue and Orange	6 and 1	R1 and S2	
TITLE 7	White and Brown	5 and 3	R2 and S0	
TITLE 8	White and Red	5 and 2	R2 and S1	
TITLE 9	White and Orange	5 and 1	R2 and S2	
TITLE 10	Black and Brown	4 and 3	R3 and S0	
TITLE 11	Black and Red	4 and 2	R3 and S1	
TITLE 12	Black and Orange	4 and 1	R3 and S2	

Documentation
for KPC1 program
TITLE12 version 1.2

Setting the Pioneer DVD-V7400 to 'POWER ON START'

The full description of this procedure is outlined in the DVD-V7400 Operating Instructions manual (page 41 and 51).

1. Make sure the player is powered up.
2. Enter the ADV SETUP MENU by holding the **SETUP** button on the remote.
3. If the POWER ON START setting on the menu set to OFF, move the selection arrow to POWER ON START.
4. Set it to ON by pressing **▶** then **ENTER**
5. Press **2** to select TITLE mode
6. Enter **00** for the Title then press **ENTER**
7. Enter **00** for the Chapter then press **ENTER**
8. Press **SETUP** to exit the menu.

For more information contact:
Technovision at (905) 420-5153
www.technovision.com