

Technovision Interactive

KEY34 keypad attached to a TV66K with TRACK99 firmware Ver 1.1

Quick Reference Guide

Technovision Inc.
1845 Sandstone Manor, #2
Pickering, Ontario
L1W 3X9
P:(905) 420-5153
F:(905) 420-0753
www.technovision.com


Operation

One of the options with the TV66K is the ability to access track on the DV66/68 using the Technovision KEY34 “telephone style” keypad.

Installation Instructions:

- Make sure the power to the player is OFF before attaching the TV-66K.
- Connect the TV66K control cable (RJ10-RJ10) to the KEYPAD port of the player.
- Connect the other end of the cable to connector P1 on the TV66K.
- Attach the optional K34W cable to the back of the KEY34 keypad so that the cable faces down.

BACK OF KEY34

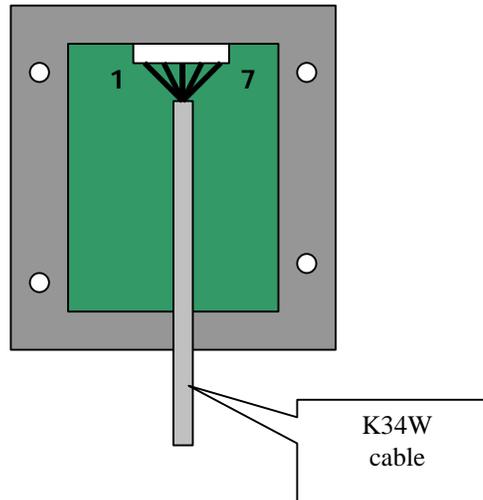

- The stripped back wires from the K34W are then attached to the terminal connectors on the side of the TV66K in the following manner:

Colour	TV66K terminal	KEY34 Pin	Function
ORANGE	10	1	Scan2
RED	9	2	Scan1
BROWN	8	3	Scan0
BLACK	7	4	Return3
WHITE	6	5	Return2
BLUE	5	6	Return1
GREEN	4	7	Return0

Program Operation:

Once the player has been powered on, you can enter as many digits as you like on the keypad – the program will accept the last two digits entered after a set delay. This delay is determined by DIPSWITCHES on the TV66K (see below).

The timeout value is equal to “5” +
If DIP#1 is ON = add 2
If DIP#2 is ON = add 4
If DIP#3 is ON = add 8
If DIP#4 is ON = add 16

A timeout value of 15 equals roughly 1 second.