


Instructions on replacing a program chip on a TV66K controller

Procedures:

- 1. Make sure power to the controller is disconnected before installation.**
- 2. Discharge any static by touching a grounded object.**
3. Using a CHIP remover or flat-head screwdriver, remove the old program chip from the socket (U1) by prying up the chip slowly on both ends. Make sure the screwdriver is between the chip and the socket and not under the socket. When in the correct position, the chip can be removed very easily.
4. Insert the new program chip making sure the notch on the chip lines up with the notch on the CHIP socket. The notch on the chip should be facing the “top” of the circuit board.
5. Make sure all the legs of the chip are inserted into the socket.

In the picture below, the notch is located to the top of the program socket (U1).

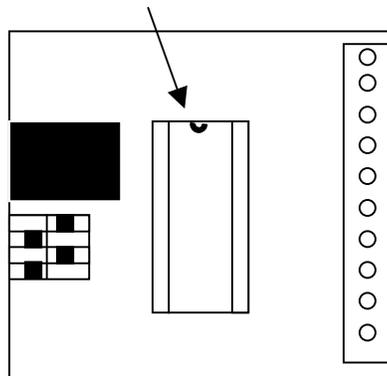

For more information contact:
Technovision Interactive Inc
(905) 420-5153

www.technovision.com