



Wiring Instructions to a Technovision Button

Most applications require that the wires be attached to the COM (common) and NO (normally open) contacts on the push button. Mounting instructions can be found at:

www.technovision.com/pb.html

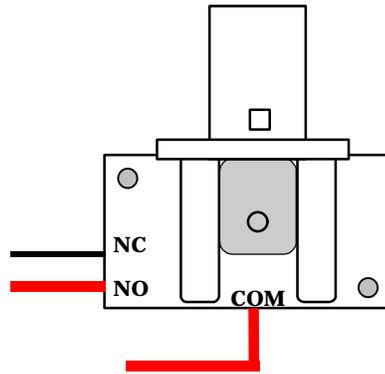

When installing button LEDs...

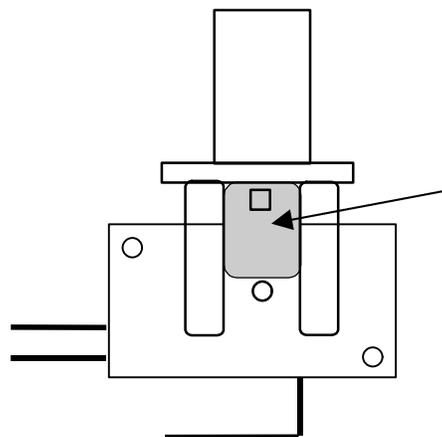

Mount LED1 and LED2 into button where this is the negative contact